

Backup Camera Troubleshooting Guide

- **Blue LED light on the monitor is blinking, indicating monitor is NOT receiving signal from the transmitter.**

Possible Cause: No power to the transmitter.

Remedy: *Fix the wire connections to 12-volt power source.*

Possible Cause: Transmitter located where the monitor cannot receive a signal.

Remedy: *Relocate the transmitter for better reception.*

Possible Cause: Loose wire connections at the transmitter.

Remedy: *Unplug and reconnect the plugs.*

- **Blue LED light on the monitor is solid, indicating signal from the transmitter has been received by the monitor, but produces no image.**

Possible Cause: Brightness and contrast controls are turned down to lowest setting.

Remedy: *Adjust the controls on the monitor.*

- **Blue LED light on the monitor does not light, indicating no power to the monitor.**

Possible Cause: Power button on monitor has been turned off.

Remedy: *Make sure the monitor has been turned ON.*

Possible Cause: 12-volt socket in vehicle has no power.

Remedy: *Make sure the socket is energized, if not, See vehicle's maintenance manual for directions.*

Possible Cause: Loose connection between the 12-volt plug and socket.

Remedy: *Remove the plug, and reinsert. Check for a secure fit.*

Possible Cause: Fuse on 12-volt power cord failed.

Remedy: *Replace the fuse in the power cord.*

IF THE UNIT HAS BEEN CHECKED AND THE PROBLEM CANNOT BE DETERMINED, PLEASE CONTACT PEAK TECHNICAL SERVICES @ 1-800-477-5847.